



THE AUTOMOTIVE LIGHTING BENCHMARK

09-18 DODGE RAM XB LED MIRROR LIGHT INSTALLATION GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS



2X MIRROR LIGHTS

TOOLS REQUIRED


T20 TORX SCREWDRIVER

INSTALLATION PROCESS

1. Tilt the mirror glass down.




2. Pull the top of the mirror glass away from the mirror housing.

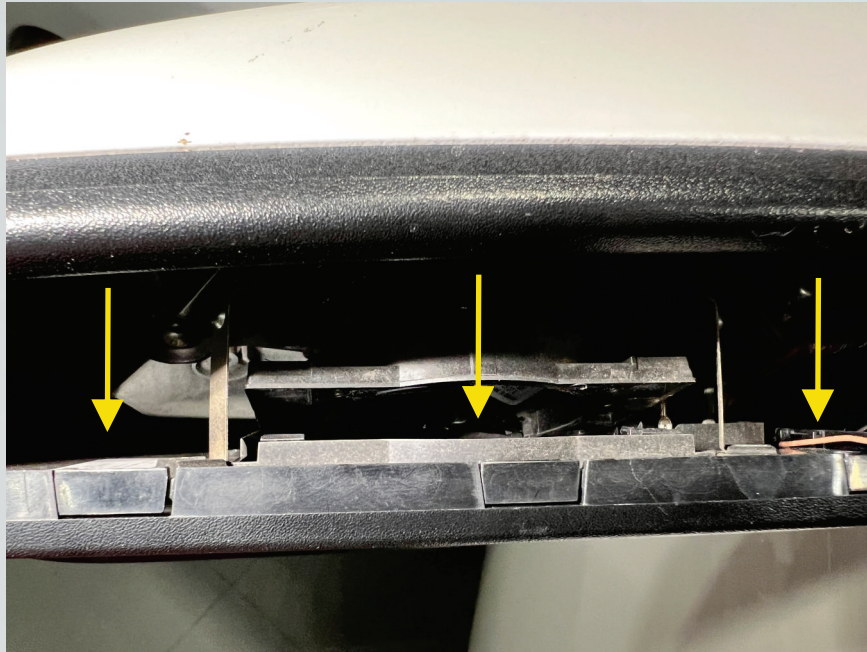


3. Tilt the mirror glass down then pull it up to separate it from the assembly.




4. Pull these terminals off the defroster pins.

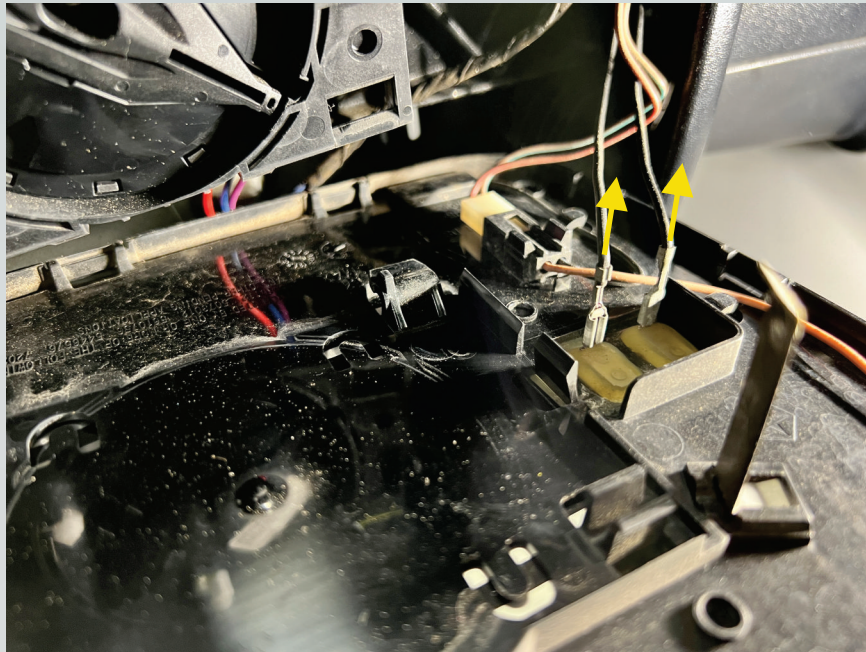

5. Unplug this connector and set glass aside.

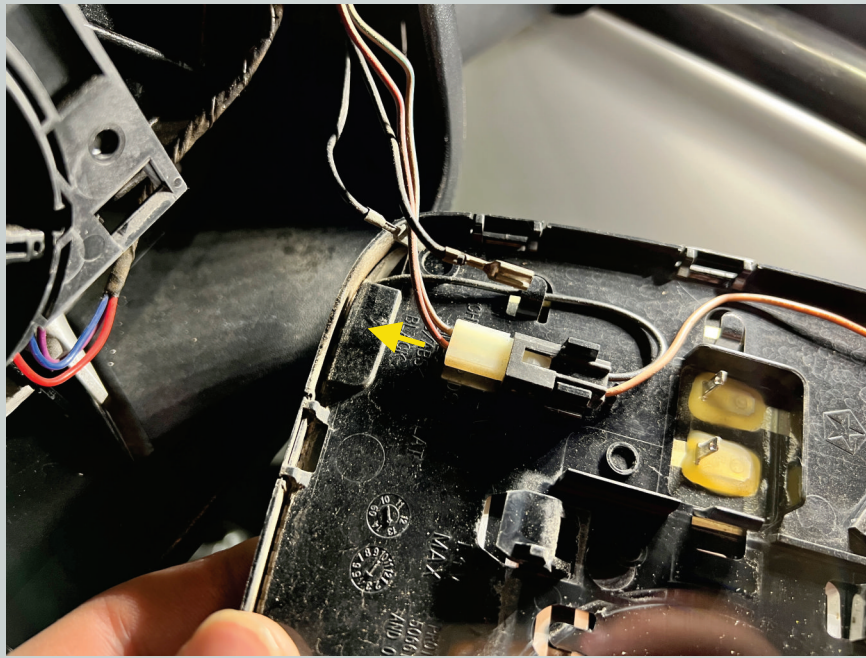

6. Remove the three (3) T20 torx screws and set aside.

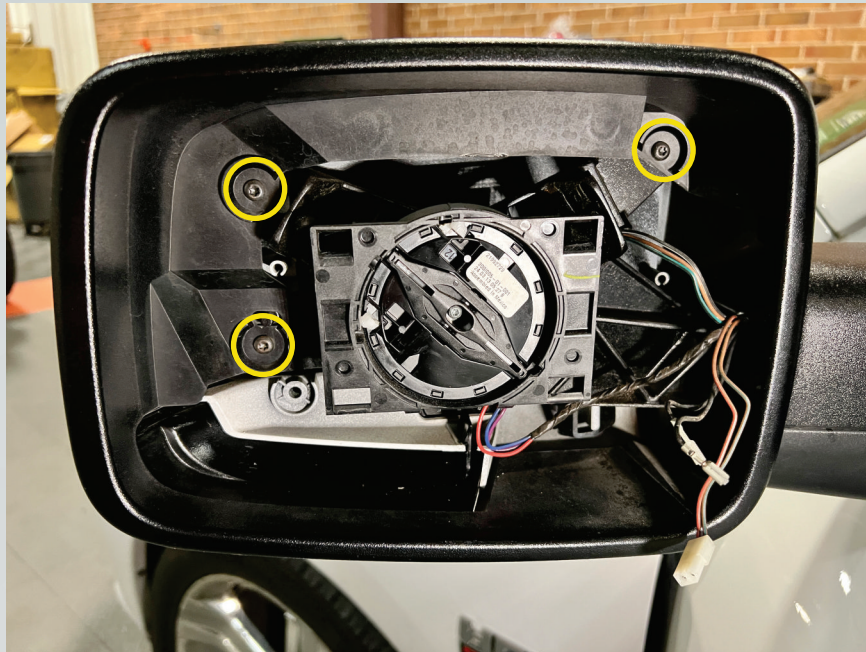

7. Separate the front cover as shown below.



8. Pull the sidemarker down and unplug it.



10. Installation is reverse of removal.

11. Repeat on second mirror.

12. Turn on the truck and go through all modes to ensure proper functionality.

-END-